



# Sprinter Van Upper Cabinets



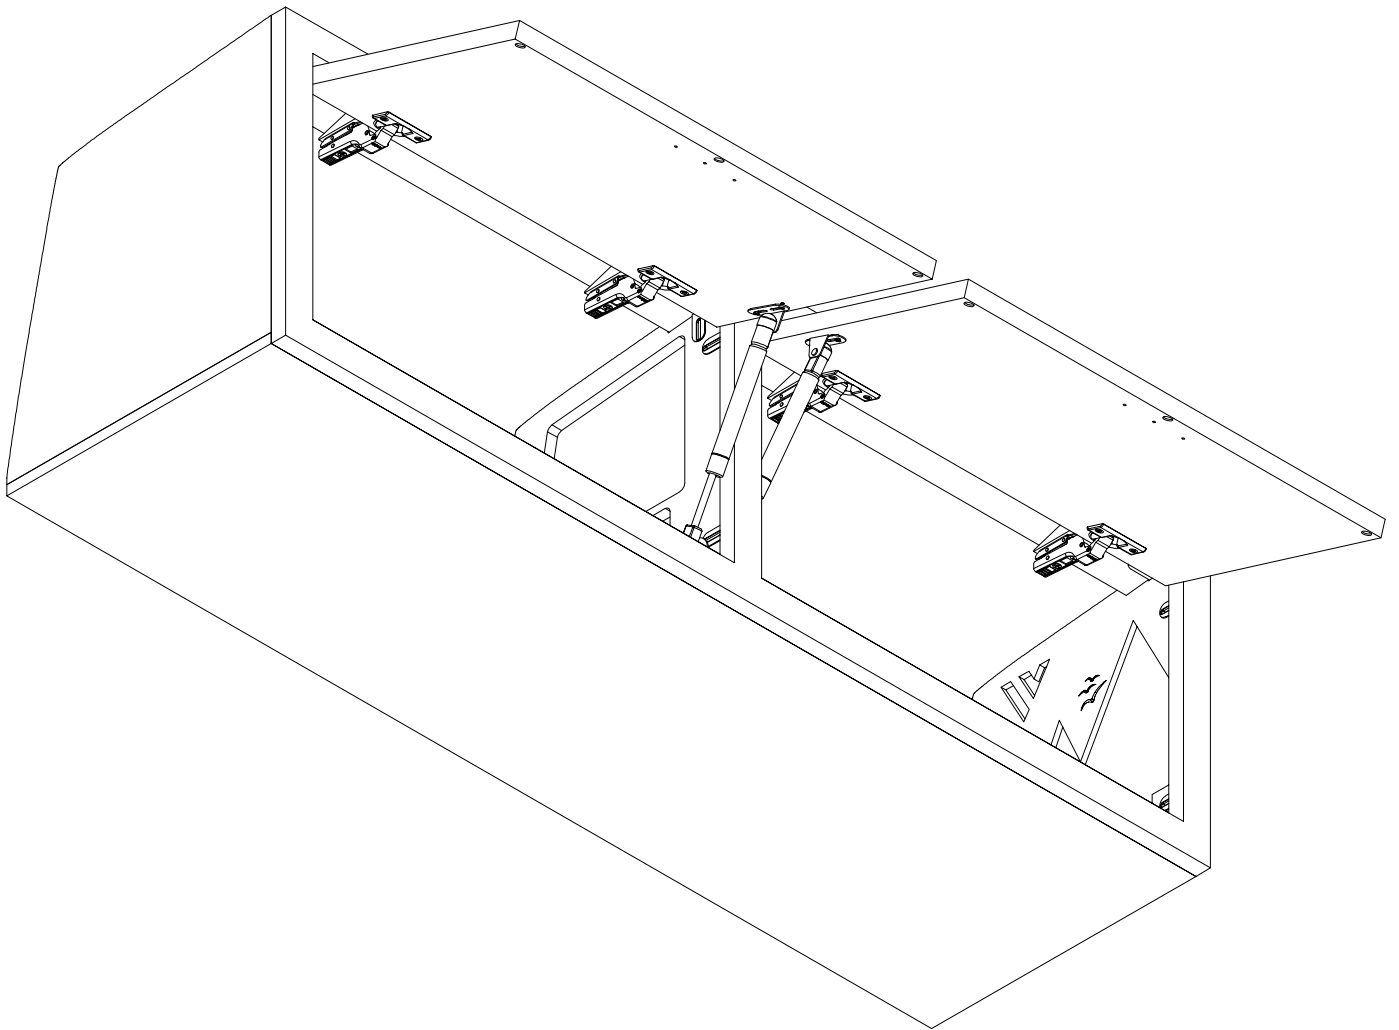

26x




1x




18x



1x

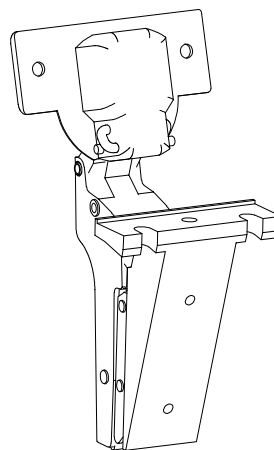


4x



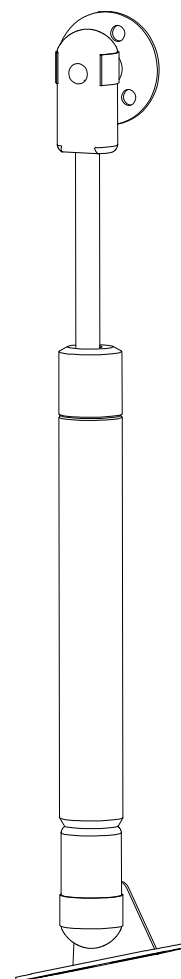


2x


1

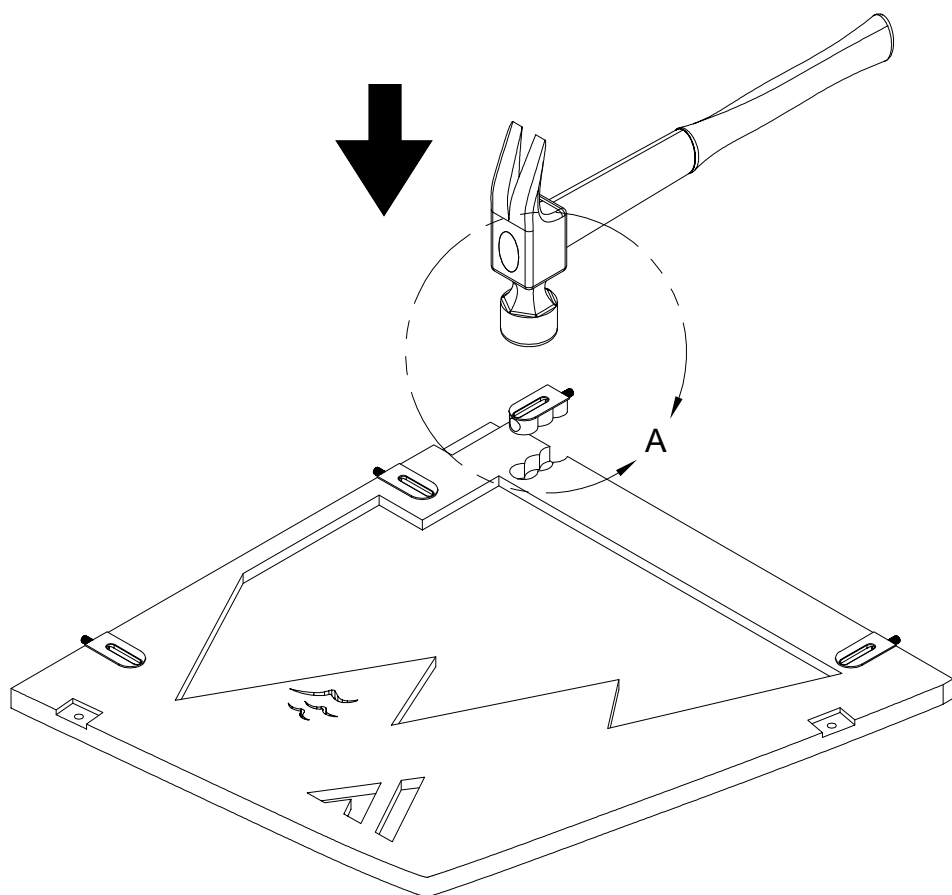


**DETAIL A**  
Gently insert cabineos into  
places with a claw hammer

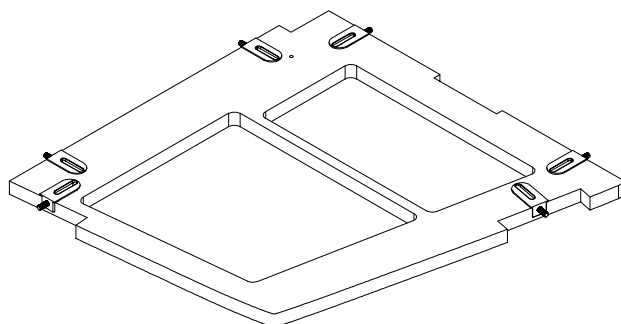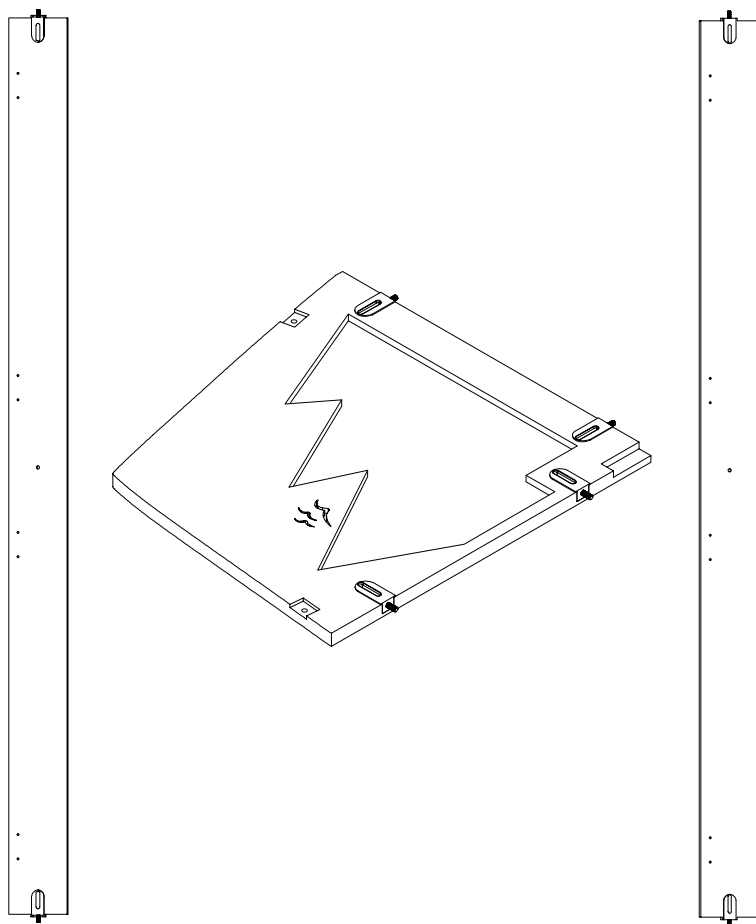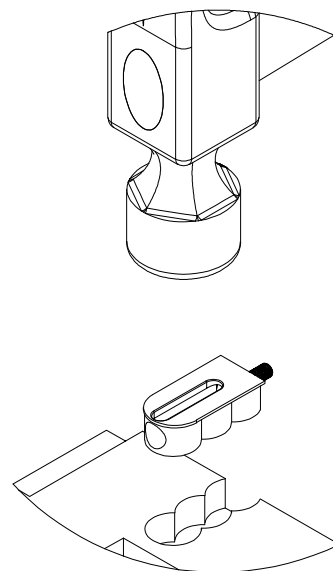


2

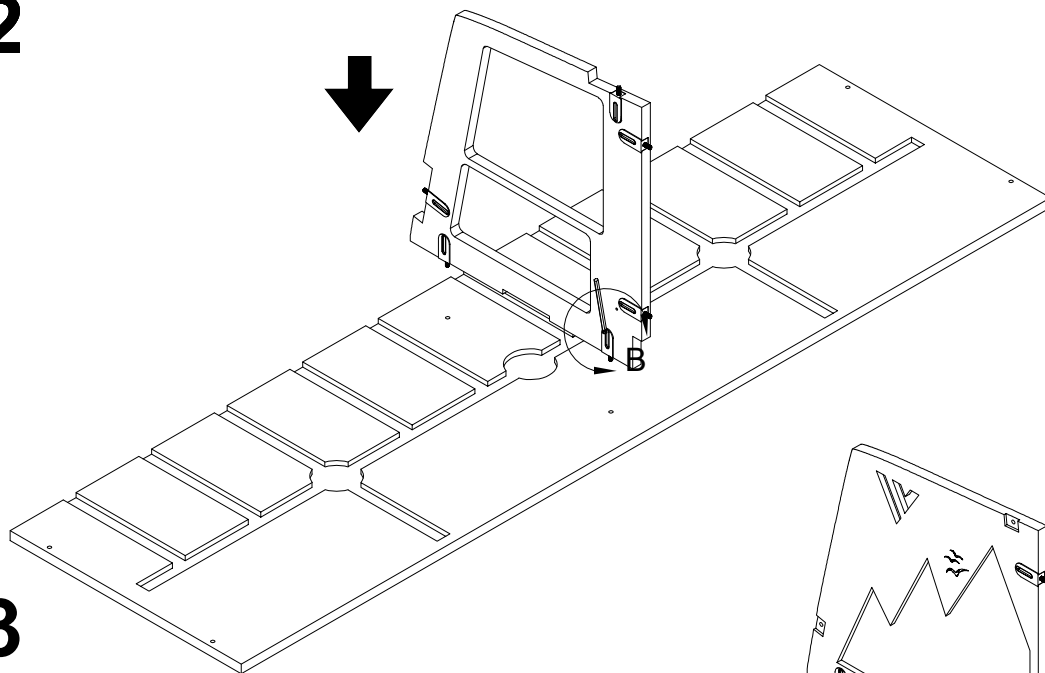


**DETAIL B**  
Use cabineo bit to  
combine middle to bottom

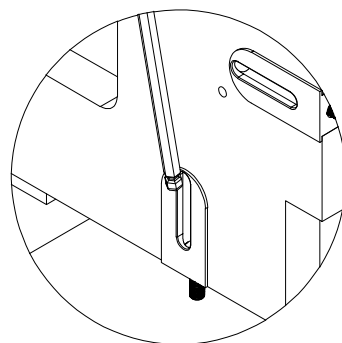


3

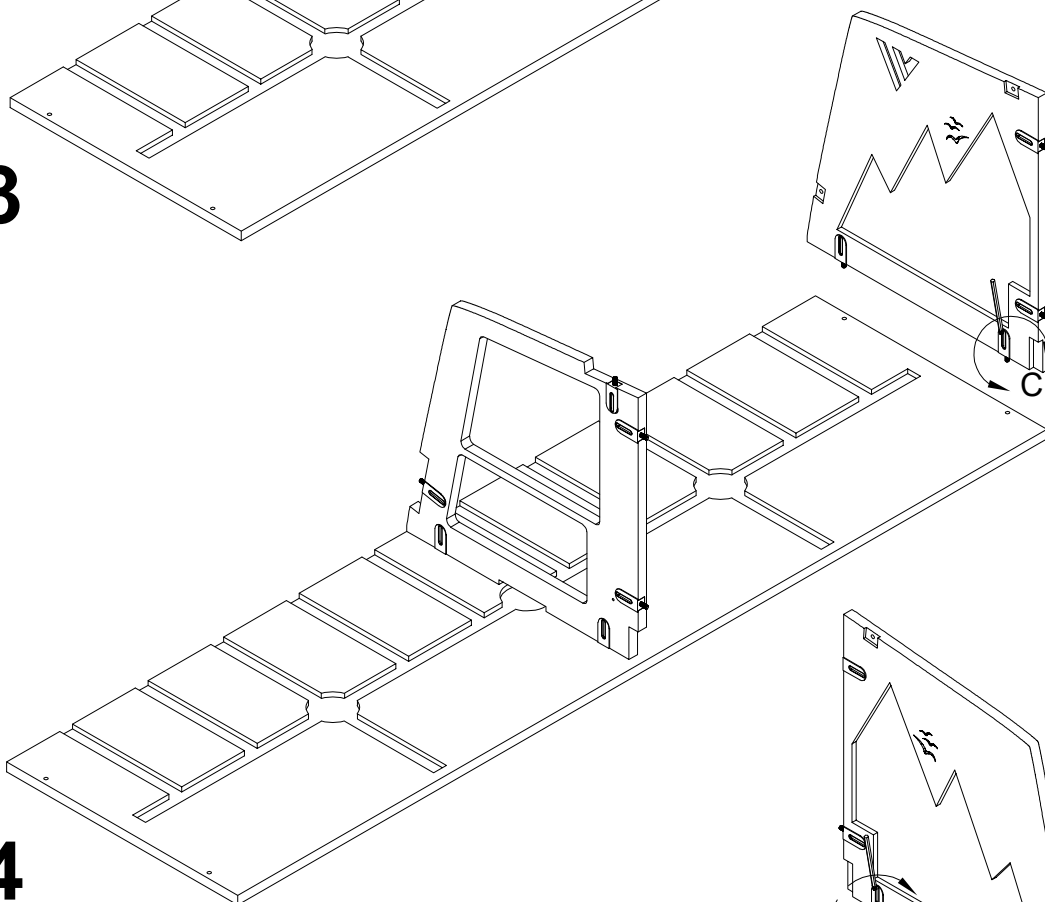


**DETAIL C**  
Use cabineo bit to  
combine side 1 to bottom

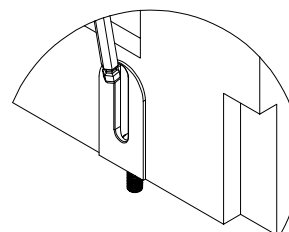


4

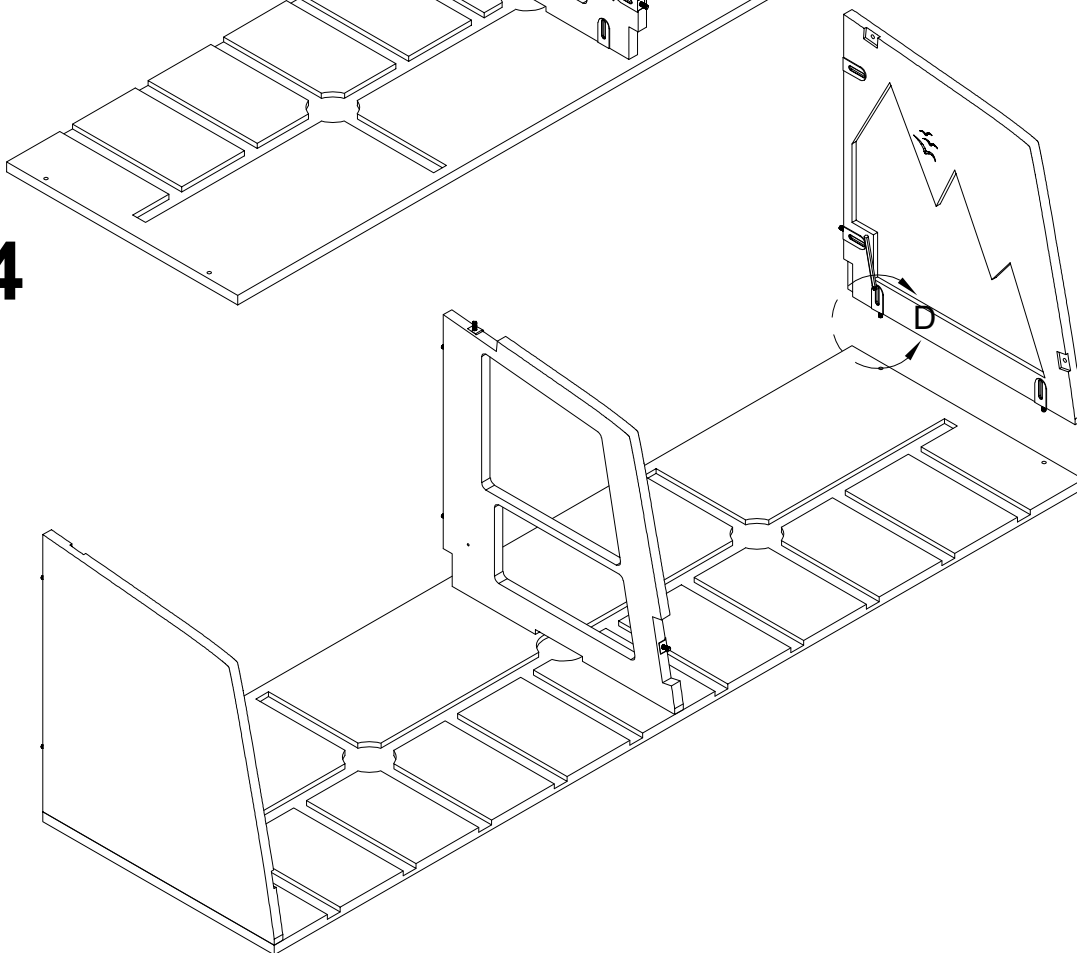


**DETAIL D**  
Use cabineo bit to  
combine side 1 to bottom

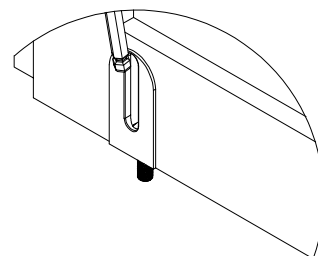


5

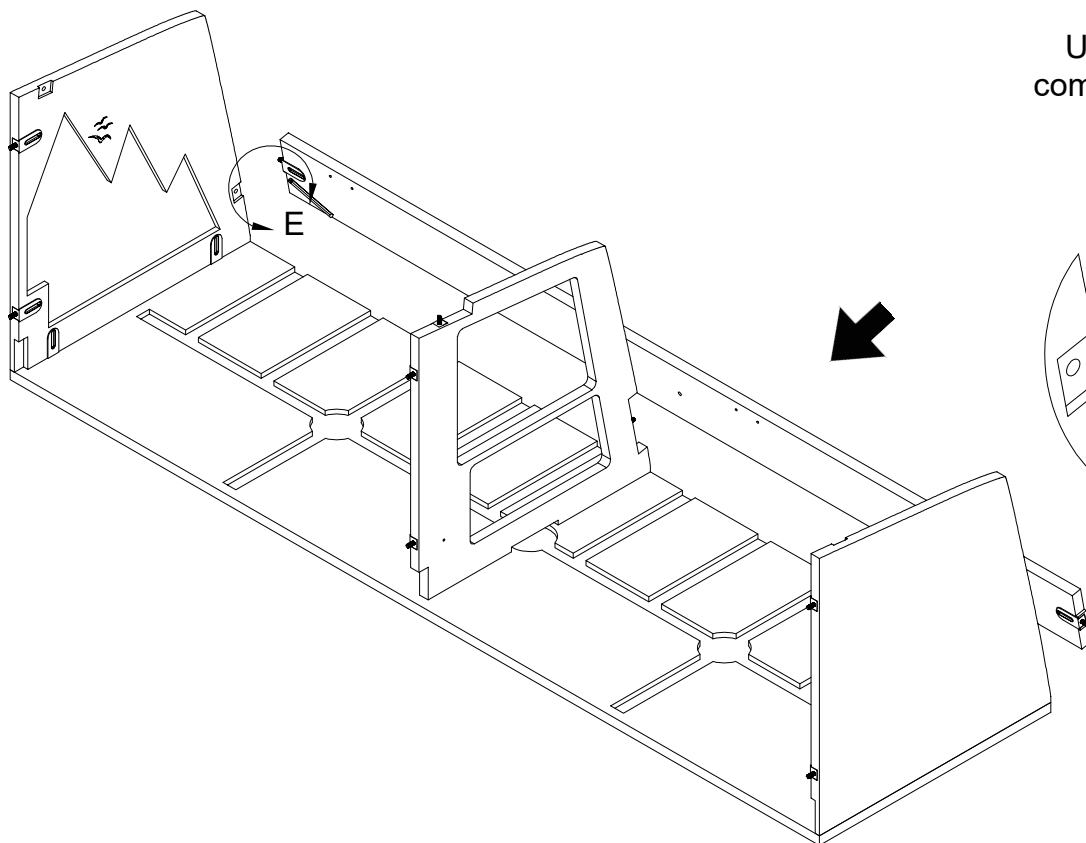


**DETAIL E**  
Use cabineo bit to  
combine top 1 to sides

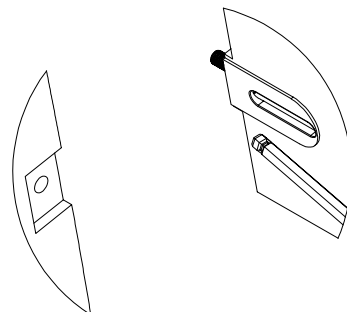


6

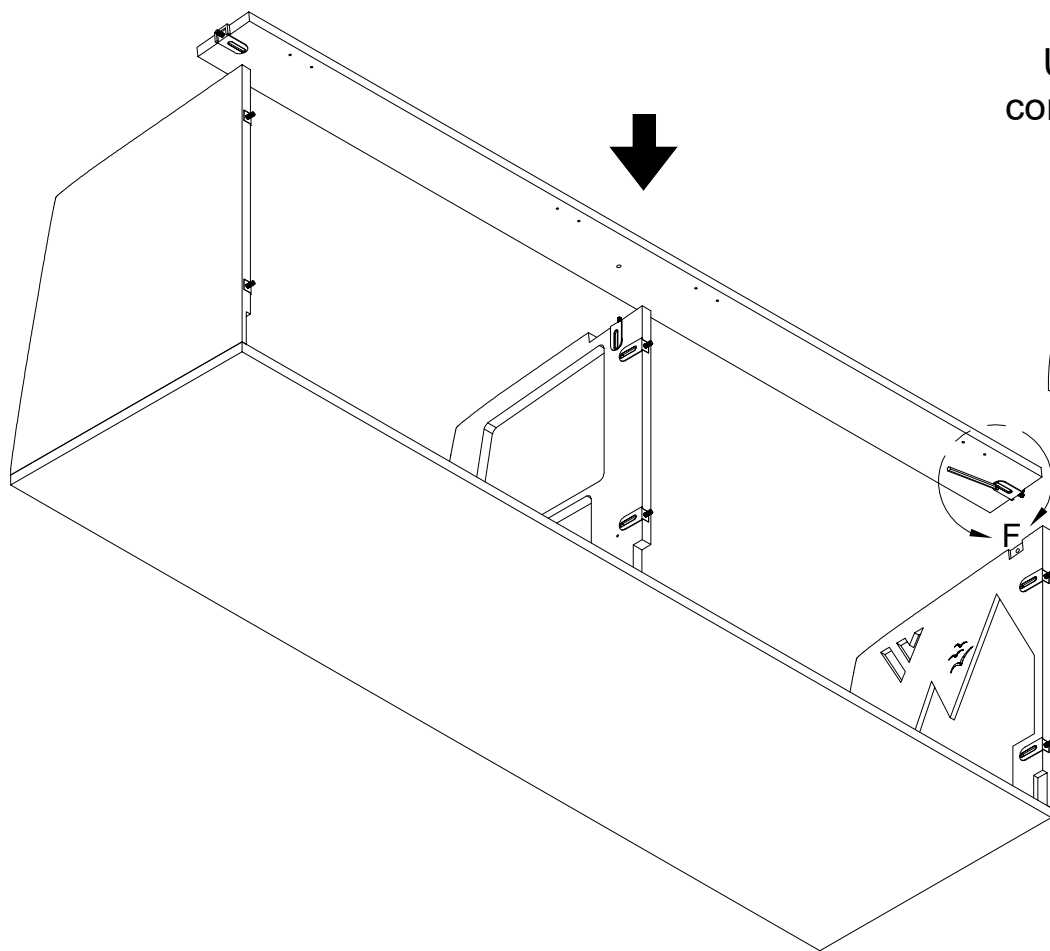

**DETAIL F**  
Use cabineo bit to  
combine top 2 to sides

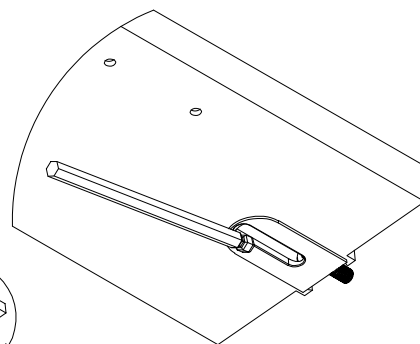


7

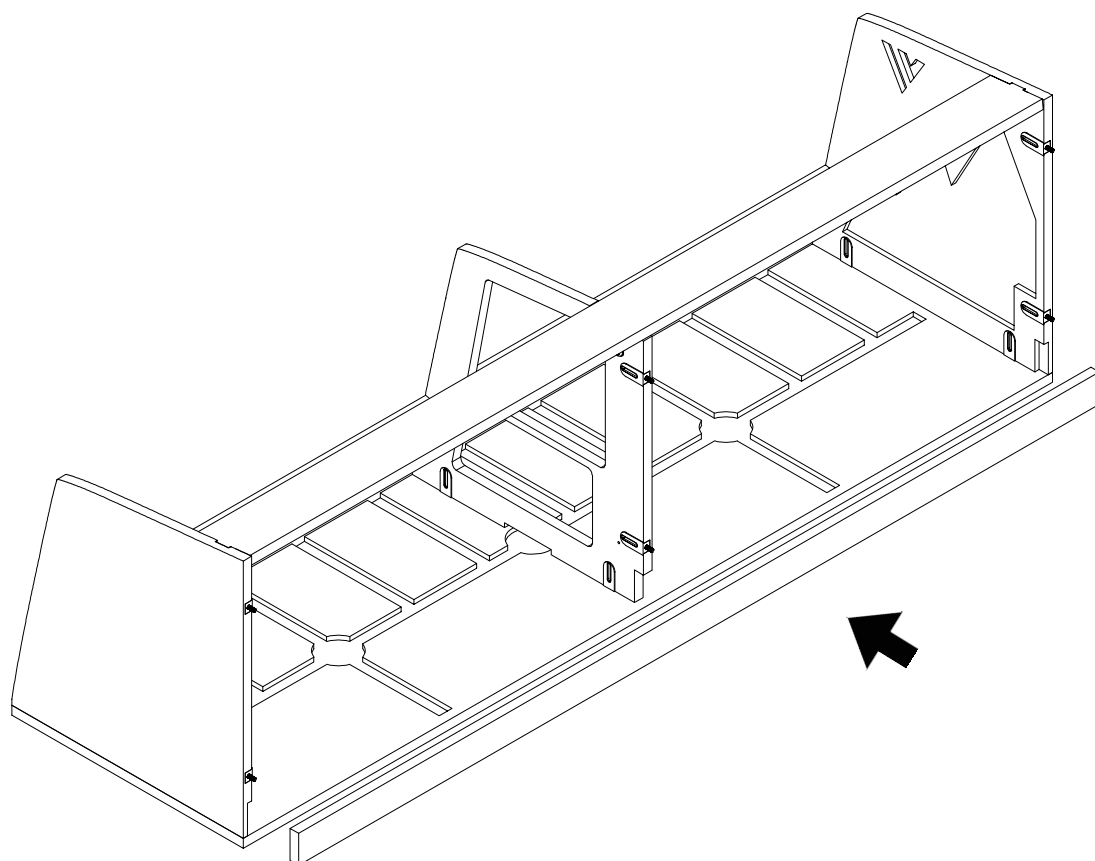


Place Front support



8

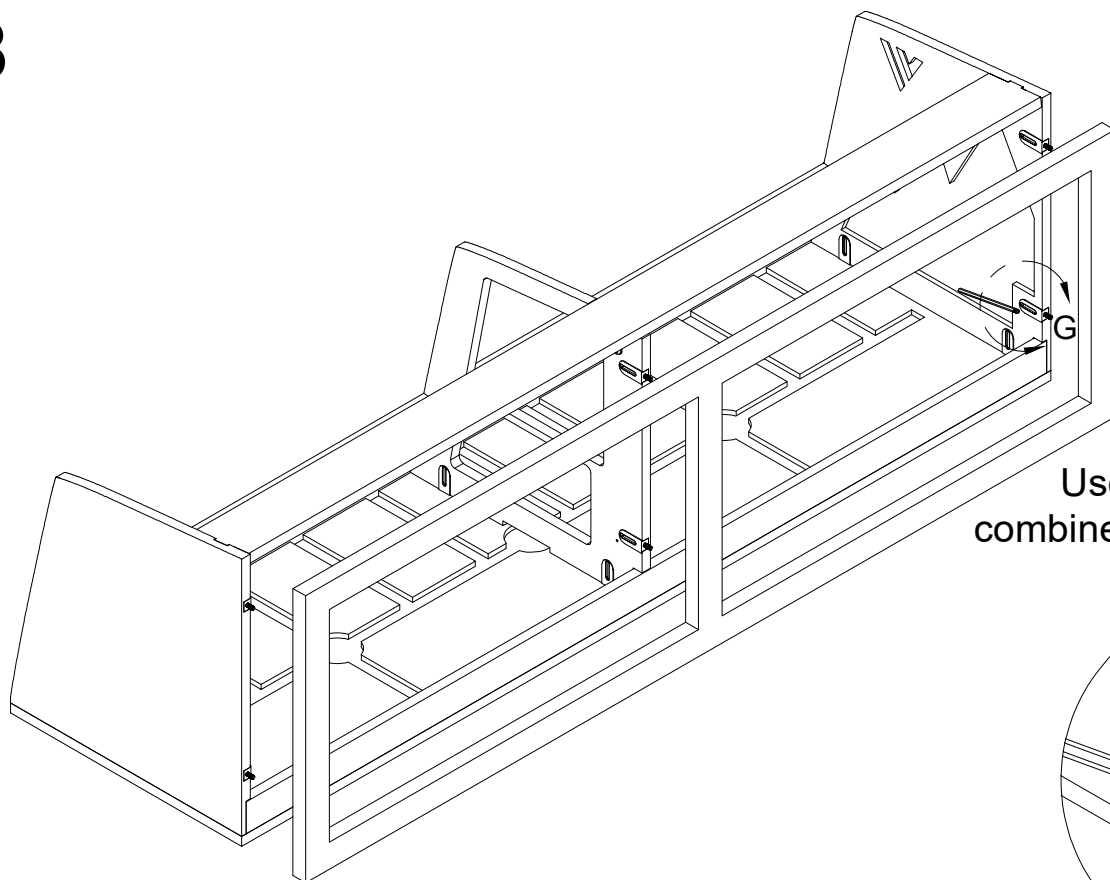


**DETAIL G**  
Use cabineo bit to  
combine face frame to sides


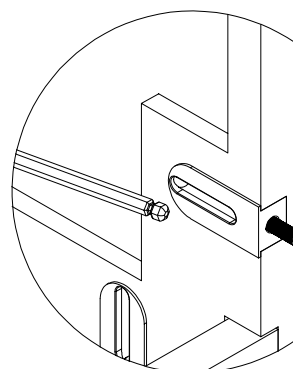


**DETAIL H**  
Use screw bit to  
combine hinges to face frame

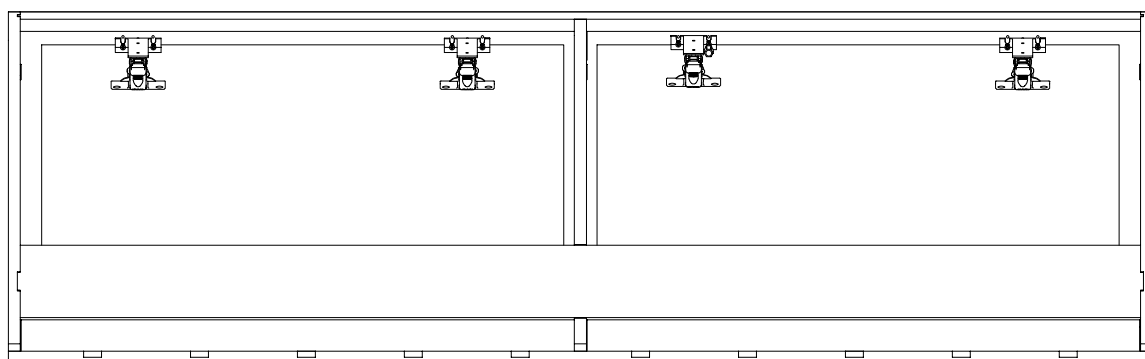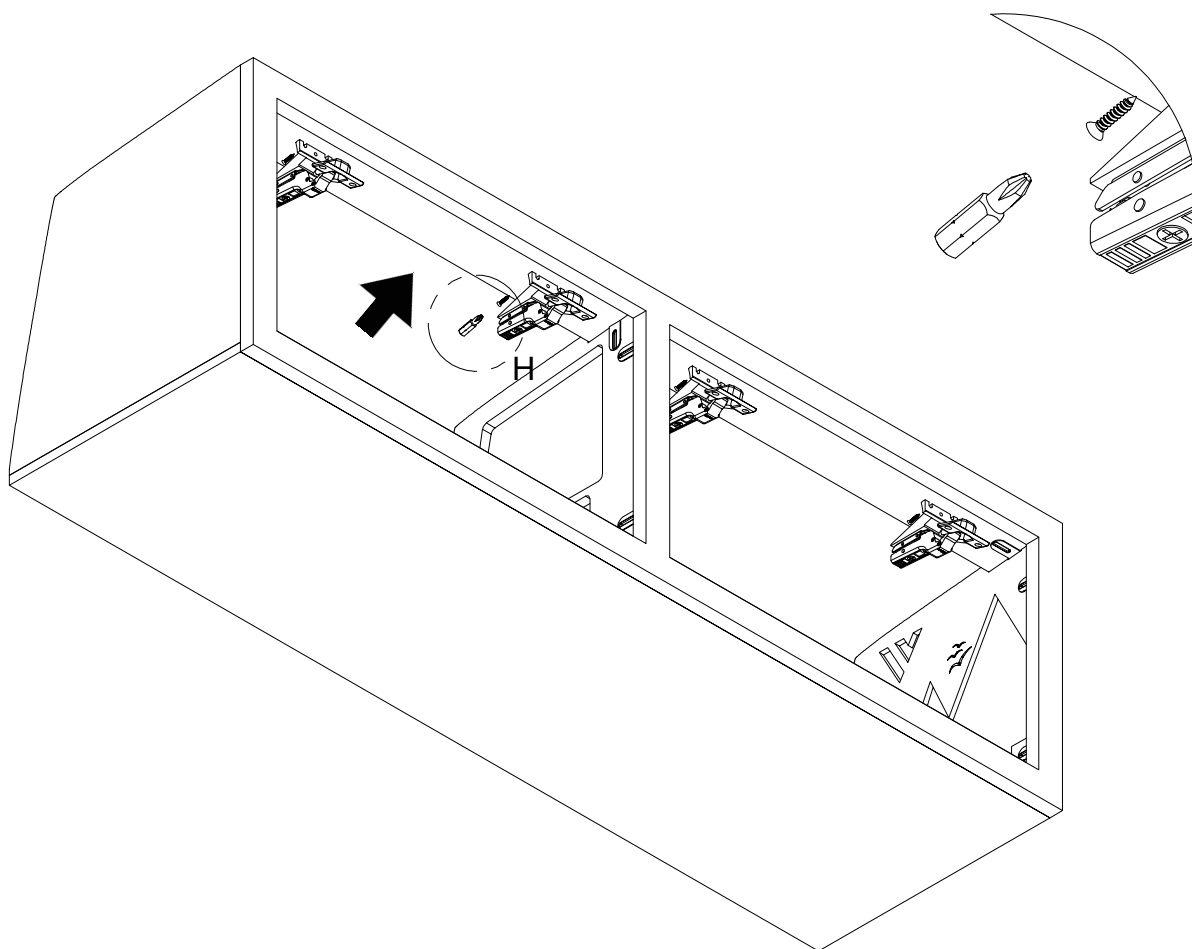


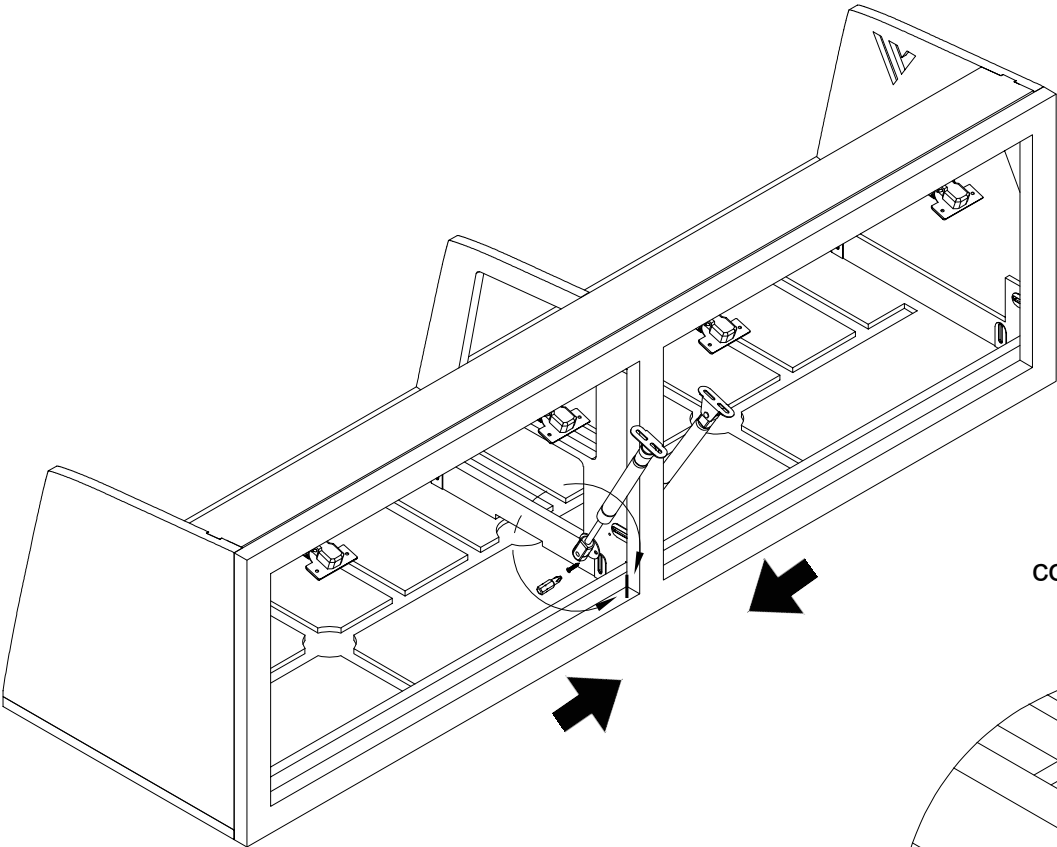


**DETAIL I**  
Use Screw bit to  
combine gaskit to mid

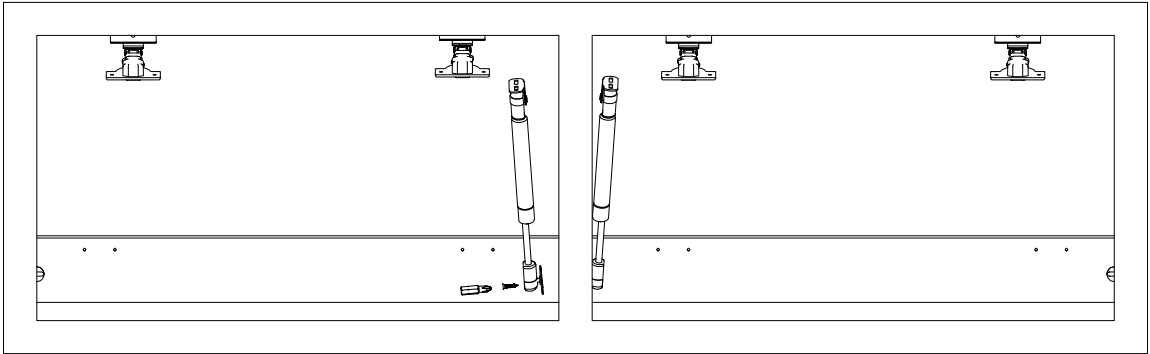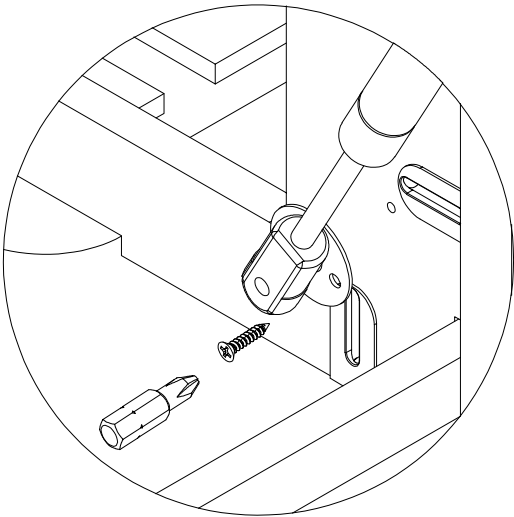




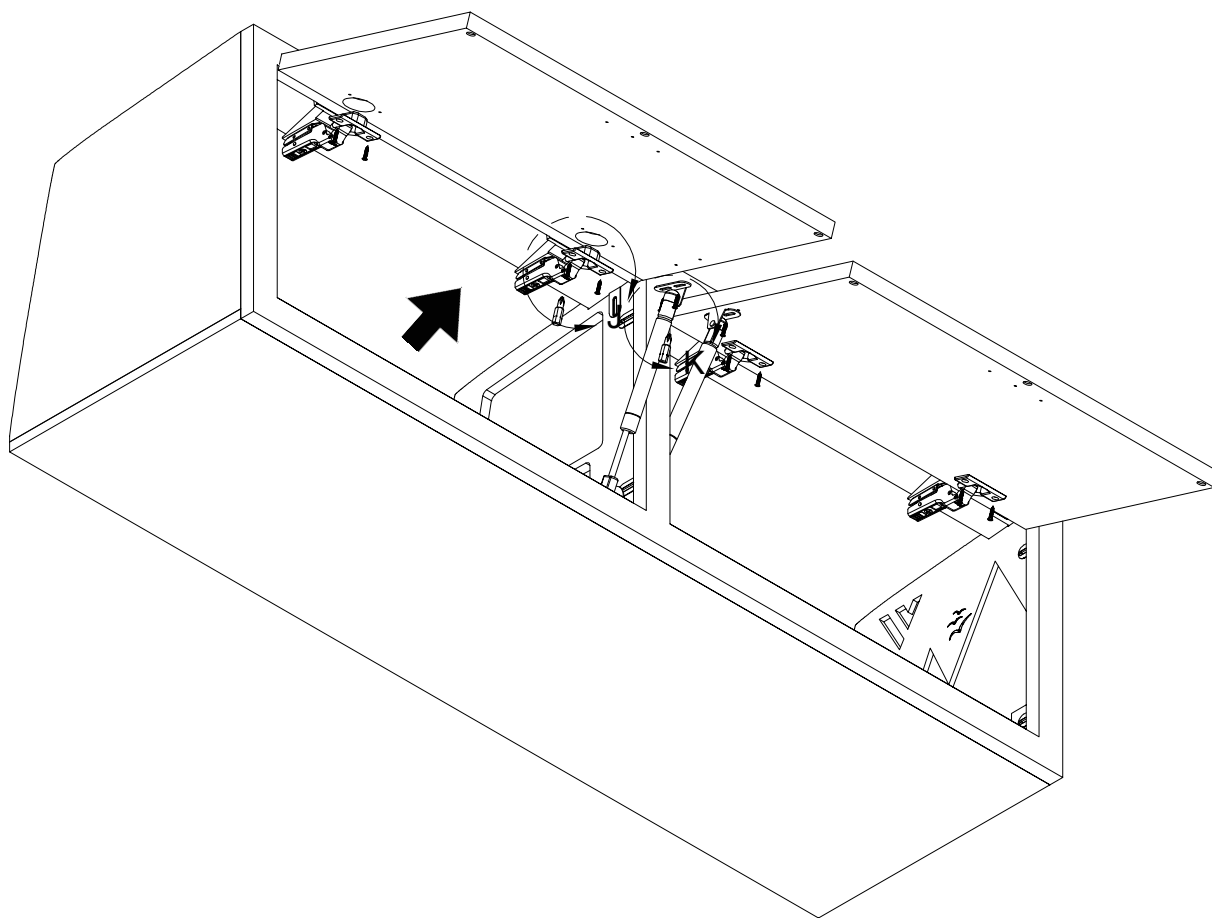

**DETAIL J**  
Use Screw bit to  
combine hinges to doors

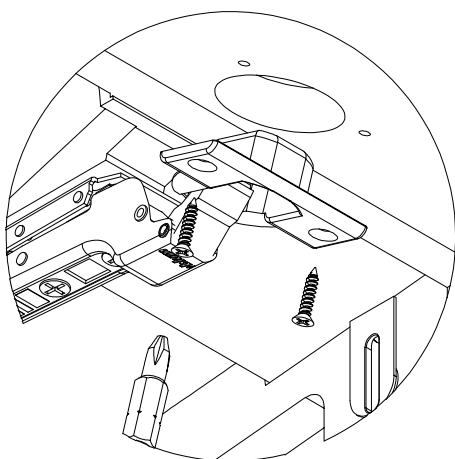

**DETAIL K**  
Use Screw bit to  
combine gasket to doors

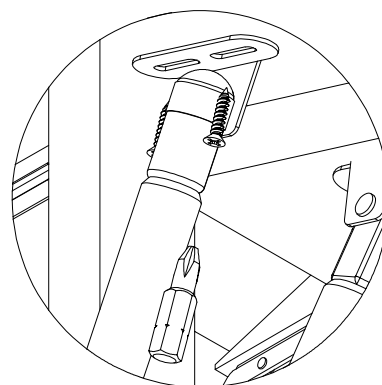

Close the doors

